

ALPHA LITE USER MANUAL BOOK



TL SERIES

TL30 ZOOM SPOT

Precautions

[WARNING]

1

Do not open or disassemble the cover to reduce the risk of electric shock.

2

Please wear safety equipment such as safety helmet during work.

3

Please install the signs below for people to bypass when install the product on high truss.

4

The work should be done under the direction of approved specialist who is trained in safety and mechanical installations.

5

The brightness and color temperature before and after aging may be different.

Contents

Safety Information	1
--------------------------	---

Fixture Information

Fixture Information	3
Fixture Exterior View	4
Dimensions	5
Technical Specifications	6

Connection and Setting

Connection (Only in 6-way adapter)	7
Address Setting (Only in 6-way adapter) ...	8



Product name.


TL30 ZOOM SPOT

- ⇒ Average CRI 96 or higher
 - ⇒ COB LED Chip
 - ⇒ Adjust the angle freely
 - ⇒ 4-way / 6-way adapter can be selected.
 - ⇒ Dimming and RDM network communication is possible through LED TL Controller (6-way only).
 - ⇒ Maintain the last signal when DMX signal is lost
-

Fixture Exterior View



Dimensions

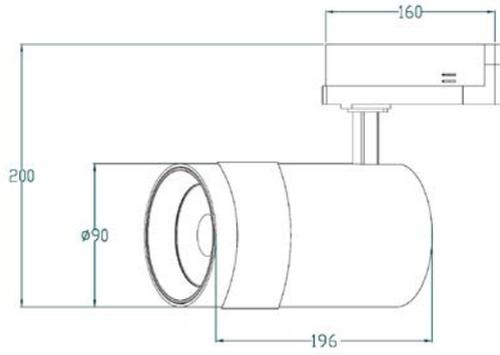


Technical Specifications

LED Chip Type	32W
Estimated LED Lifetime (hours)	50,000
White Light (K)	5600
Color Rendition (%)	97
(Optional) Dimming with TL Controller (%)	0~100 (Only in 6-way adapter)
Beam Angle (°)	15~60 Zoomable
Signal Control	6 way Track rail DMX
(Optional) Individual Control	Dip Switch
(Optional) Supported Protocol	DMX512 with Track Light Controller
Remote Device Management	Not Supported
Channel Function	Dimming
Track Adapter	4-way / (Option) 6-way
Power Input Voltage	AC 200-240V
Power Consumption (W)	28.8
Body Dimensions (mm/inch) (DIA x L)	ø90 x 196
Body Weight (kg/lbs)	1.1 / 2.4


* This specification data is based on the aging state of the equipment, and the brightness and color temperature before and after aging may be different .

Connection (Only in 6-way adapter)

*TL30 Image example

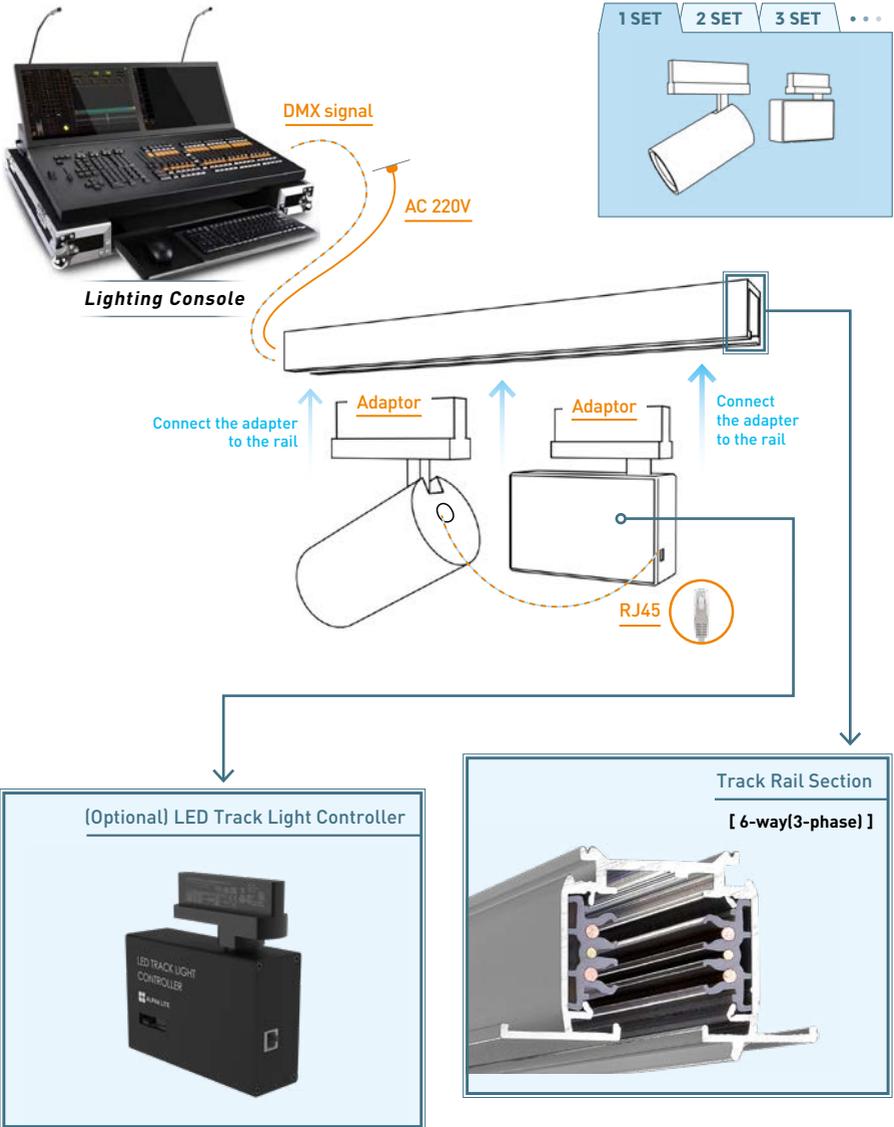

Address Setting (Only in 6-way adapter)

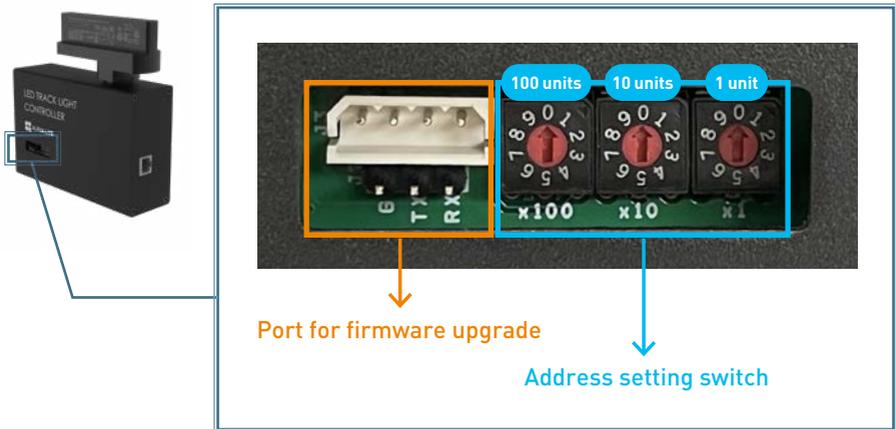

Address Setting Example

Maximum #512 [Adjust the arrows to set the number]





ALPHA LITE USER MANUAL BOOK

—

<Tel> 82-2-6317-0464

<Fax> 82-2-2039-0464

<E-mail> hello@alpha-lite.net

<Web> www.alpha-lite.net