

# ALPHA LITE USER MANUAL BOOK



---

A SERIES

---

**A2460**

## **Precautions**

[ WARNING ]

---

**1**

Do not open or disassemble the cover to reduce the risk of electric shock.

---

---

**2**

Please wear safety equipment such as safety helmet during work.

---

---

**3**

Be sure to fix the safety chain on the product when installing and moving.

---

---

**4**

Please install the signs below for people to bypass when install the product on high truss.

---

---

**5**

The work should be done under the direction of approved specialist who is trained in safety and mechanical installations.

---

---

**6**

The brightness and color temperature before and after aging may be different.

---

# Contents

Safety Information	1
--------------------	---

## Fixture Information

Fixture Information	3
Fixture Exterior View	4
Dimensions	5
Accessory Options	6
Technical Specifications	7
Photometry Data	8

## Fixture Installation

Power Connection	9
DMX Connection	10

## LCD Screen Instruction

Unlocking	11
Screen Instruction	12
Menu Tree	13
Main Screen by Mode & Product Information	14
DMX Mode (Channel Change & Address Setup)	15
User Mode (Intensity & Color Temperature Adjust)	16

## Extra Function

Sleep Mode Function	17
RDM Function	
Dimming Speed Setup	
Master Function	18
Fixture ID Number Setup	19
Device Label Setup	

## Error Information

Temperature Sensor	20
Network Connection	

## Protocols

DMX Protocols	21
RDM Protocols	23



Product name.

---

## A2460




---

- ⇒ Flat light source lighting fixture, which is mainly used in broadcast studio, can create a variety of atmospheres in the set.
  - ⇒ Excellent light quality, and average CRI 95~98 / R9, R12 are CRI 90 or higher
  - ⇒ Light that does not expose the light source, with less glare, evenly and extremely soft light distribution
  - ⇒ High efficiency and light saturation by using Micro diffusing lens, and excellent photometric flatness
  - ⇒ 2900~6000K color temperature control function
  - ⇒ Support RDM network communication and various mode setting possible
  - ⇒ Smart touch control method makes it easy and convenient to check all information at a glance
  - ⇒ Long life, reduce maintenance costs and power consumption.
-

# Fixture Exterior View



## Dimensions

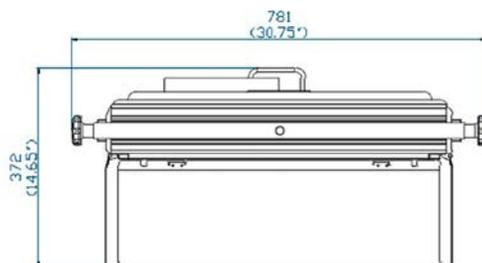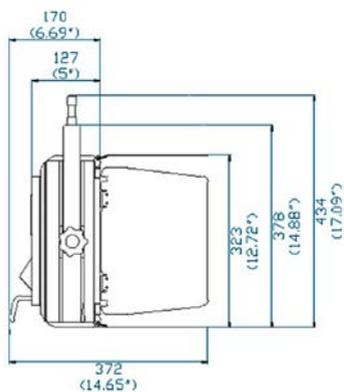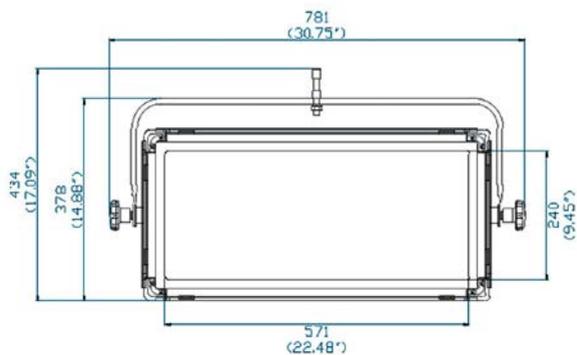

## Accessory Options

---



### Pole operation yoke

· Pan & Tilt


---



### Soft box

· Detachable

---

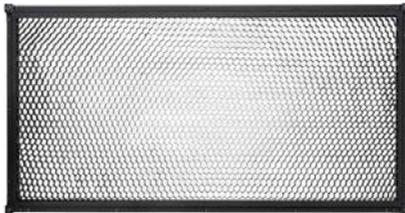

### Honeycomb

· Detachable

---

## Technical Specifications


<b>LED Chip Type</b>	0.5W 5050 PKG LED
<b>Estimated LED Lifetime (hours)</b>	50,000
<b>White Light (K)</b>	2,900~6,000K (VCT)
<b>Color Rendition (%)</b>	CRI 98 / TLCI 98
<b>Dimming (%)</b>	0~100 (16-bit)
<b>Light Aperture Size (mm/inch)</b>	571 x 240 / 22.5 x 9.5
<b>Beam Angle ( ° ) (Standard)</b>	135
<b>Signal Control</b>	5-Pin DMX In and Out
<b>Individual Control</b>	Smart Touch LCD Controller
<b>Supported Protocol</b>	DMX512 / RDM
<b>(Optional) Supported Protocol</b>	DMX512 Wireless / RDM Wireless
<b>Remote Device Management</b>	Supported
<b>Channel Function</b>	Dimming / CCT
<b>Power Input Voltage</b>	AC 100-240V / 50~60Hz
<b>Power Consumption (W)</b>	300
<b>Ambient Temperature Operation ( °C)</b>	-20~45
<b>Spigot Mounting (mm)</b>	16 / 28
<b>Tilt Angle ( ° )</b>	+ / - 90
<b>Body Dimensions (mm/inch) (WHD)</b>	685 x 320 x 170 / 27 x 12.6 x 6.7
<b>Full Dimensions with Manual Yoke (mm/inch) (WHD)</b>	781 x 434 x 170 / 30.8 x 17.1 x 6.7
<b>Body Weight (kg/lbs)</b>	9.7 / 21.4
<b>Full Weight with Manual Yoke (kg/lbs)</b>	10.9 / 24
<b>Protection Class</b>	IP20

\* This specification data is based on the aging state of the equipment, and the brightness and color temperature before and after aging may be different.

# Photometry Data

5600K

0m 1m 3m 5m 7m 9m Distance(m)

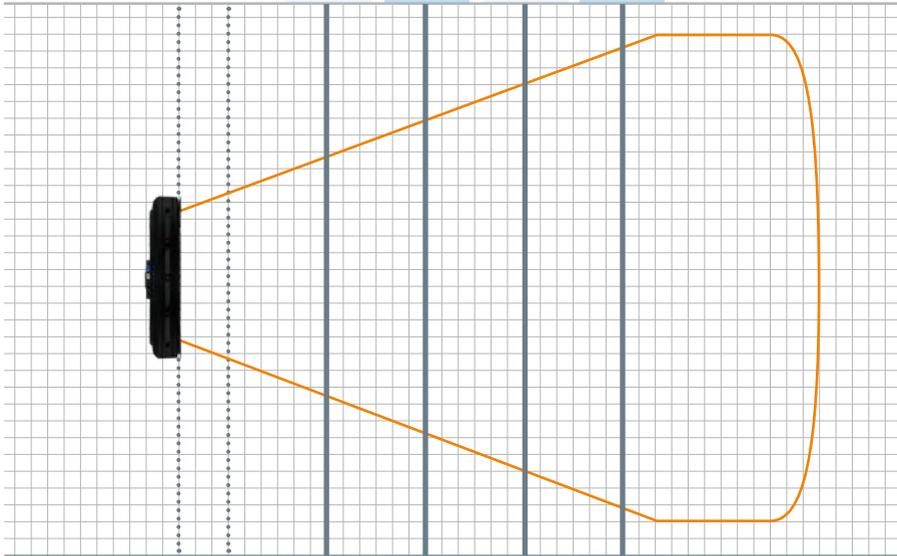

135°

788

310


164

104

Illuminance(lux)

## Power Connection

AC power at 100-240V, 50-60Hz

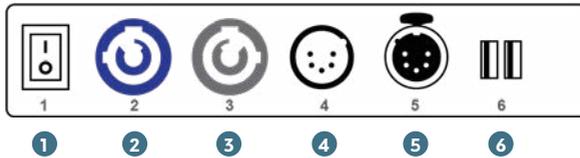


- |                       |  |
|-----------------------|--|
| ① POWER ON/OFF SWITCH | ④ DMX IN                               |
| ② POWER IN            | ⑤ DMX OUT                              |
| ③ POWER OUT           | ⑥ USB PORT<br>(for ADMINISTRATOR ONLY) |

※ Do not connect USB without administrator's permission.

- ⚠ WARNING**
1. Observe the proper voltage rang.
  2. If power is supplied outside the range, noise may be generated from the SMPS.
  3. If the operating voltage is out of the proper voltage range, SMPS function may be degraded or damaged.

**Power Pass-Thru** : Based on operating voltage 240V and using the cable provided by ALPHA LITE.

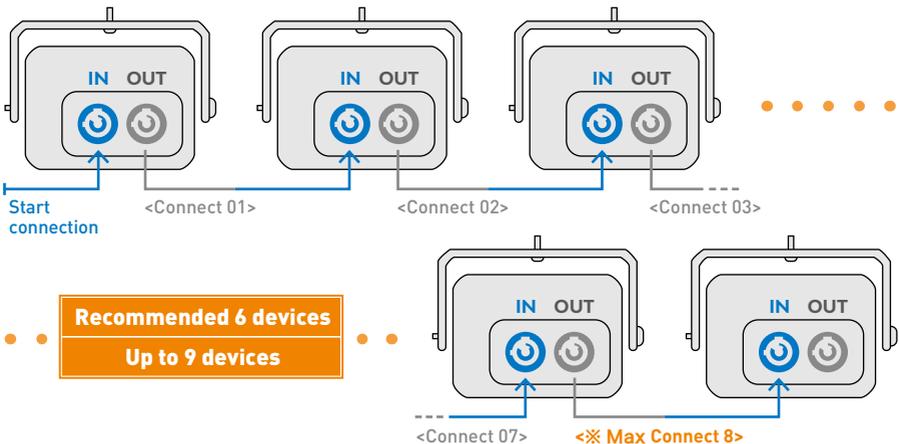


## DMX Connection

3-pin or 5-pin XLR sockets are equipped for DMX input and output, depending on user needs.

Connect the controller to a lighting, or lighting fixture to other lighting fixture. If user uses a standard DMX controller, the DMX output of the controller can connect directly to the DMX input of the first fixture in the DMX chain.

User must use an adapter cable for connect the DMX controller to other XLR output.

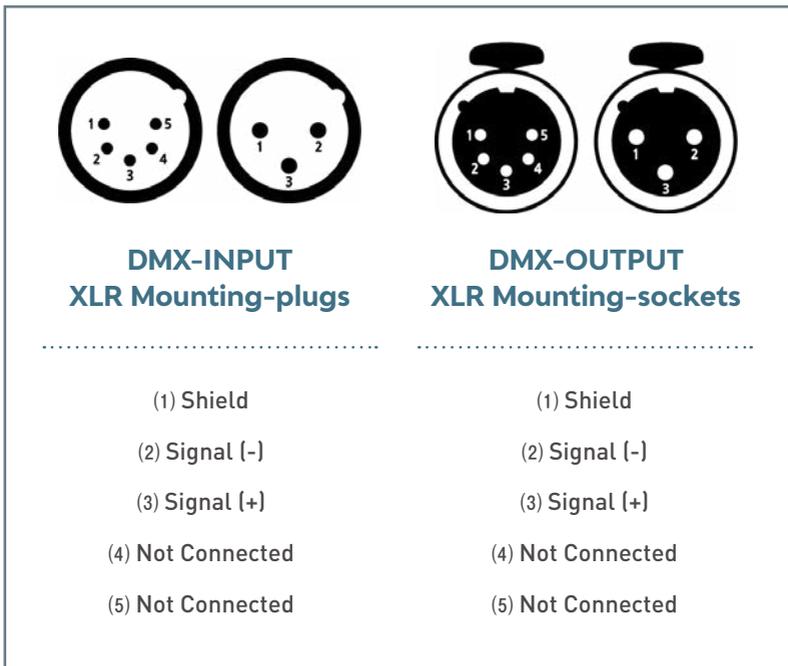


- ⚠ WARNING**
1. Connect the DMX output of the first lighting fixture in DMX chain to the DMX input of the next fixture.
  2. Connect one output to the input of the next fixture until all fixtures are connected.
  3. In the last lighting fixture, the DMX cable must be end with a terminator (120 Ω resistor) in DMX output signal (+, -).

## Unlocking

When the fixture is turned on, the Smart Touch screen automatically locked. To unlock the touch screen, touch the finger icon (A) three times. If you do not touch for 30 seconds, the lock is reset.

### [ Main Screen (Locked) ]

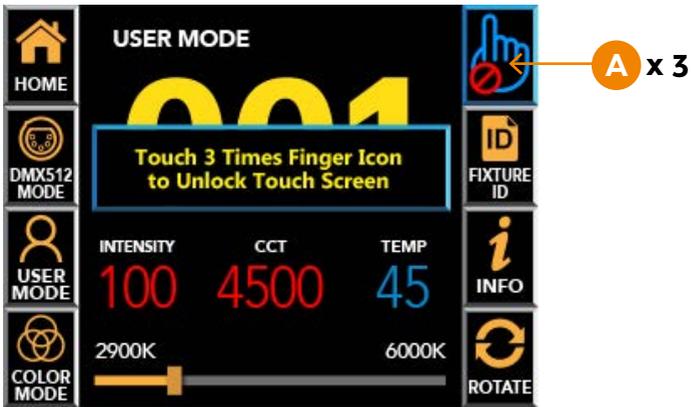


### [ Fixture ID Screen (Locked) ]



## Screen Instructions

### [ Main Screen (Unlocked) ]

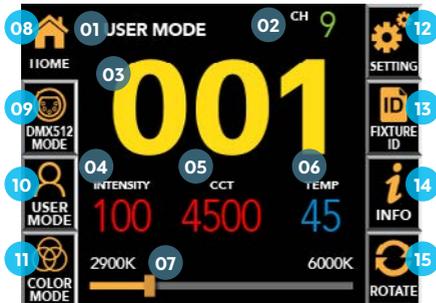

### [ Setting Screen ]



01	<b>Current Mode</b>	Display DMX MODE or USER MODE or COLOR MODE.
02	<b>Current Channel Mode</b>	Display current channel mode. <i>*Only display on DMX MODE</i>
03	<b>DMX512 Address</b>	Display current DMX512 Address.
04	<b>Brightness (Intensity)</b>	Displays the brightness value(0~100%) of the equipment.
05	<b>CCT (Correlated Color Temperature)</b>	Displays the color temperature( <b>2900~6000K</b> ) of the equipment.
06	<b>Fixture Current Temperature</b>	The current temperature of the instrument is detected and displayed in °C.
07	<b>(In USER MODE) Activated function control bar</b>	Adjust the selected function among Intensity and Color Temperature.
	<b>(In DMX MODE) Current channel mode</b>	Display current channel mode. <i>*Only display on DMX MODE</i>
08	<b>Home</b>	Return to the main screen
09	<b>DMX512 Mode &amp; Address Setup</b>	Set channel mode and DMX512 address
10	<b>User Mode Setup</b>	Set 'Intensity' and 'CCT' manually.
11	<b>Color Mode Setup</b> <i>(No applicable model)</i>	Set 'RGB' lighting color, 'Saturation', and 'Intensity'
12	<b>Setting</b>	Setting or changing the function of the equipment.
13	<b>Fixture ID</b>	Displays numbers for equipment management.
14	<b>Equipment Information</b>	Displays the help that describes the screen.
15	<b>Screen Rotation</b>	LCD screen is rotated 180° for each touch.
16	<b>Sleep Mode Setup</b>	Activate and deactivate LCD Auto off function
17	<b>Master Setup</b>	Activate and deactivate Master function
18	<b>RDM Mode Setup</b>	Activate and deactivate RDM function
19	<b>Dimming Speed Setup</b>	Set dimming speed

# Menu Tree

- ⊖ Home [Main screen]
  - ⊖ DMX512 Mode
    - DMX mode select
    - DMX address input
    - ⊖ Information
      - DMX channel value
  - ⊖ User Mode
    - Intensity setup
    - Color temperature setup
    - Tint setup No applicable model
    - ⊖ Information
      - Description of each function
  - ⊖ Color Mode No applicable model
    - RGB color setup
    - Saturation setup
    - White setup
    - ⊖ Full screen
      - Individual RGB setup and Preset
    - ⊖ Information
      - RGBW value
  - ⊖ Setting
    - Sleep mode setup
    - Master function setup
    - RDM mode setup
    - Dimming speed setup
    - ⊖ Information
      - Description of each function
  - ⊖ Fixture ID
    - ⊖ Fixture ID screen
      - Fixture ID number input
      - ⊖ Information
        - Description of fixture ID
  - ⊖ Information
    - Basic equipment information
  - ⊖ Rotate

## Main Screen by Mode & Product Information

### 001 Main Screen by Mode Information

HOME

DMX MODE

USER MODE

COLOR MODE

The current mode is displayed in the upper left corner of the main screen among DMX MODE, USER MODE and COLOR MODE (No applicable model), and the DMX address number of the equipment is displayed in the middle with a yellow number. At the bottom, the current lighting value and fixture temperature are displayed, and some lighting value can be adjusted on the main screen by touching the value.

#### [ DMX MODE ]



#### [ USER MODE ]



#### [ COLOR MODE ]



### Product Information

HOME

INFO

Product model name, firmware version, UID number, current temperature of equipment, usage time of equipment, LED usage time, website, manual download link, etc. by clicking the INFO button on the main screen.

Each 'MENU' ▶ Touch the 'INFO' ▶ User can check the menu description and functions.



## DMX Mode Channel Change & Address Setup

**DMX MODE** : It is used to adjust value by DMX512 signal.


HOME

DMX512 MODE

Move to the DMX channel change screen.

In DMX512 MODE screen, user can select DMX channel mode on top tap.

▶ Input DMX512 address by pressing the number pad.


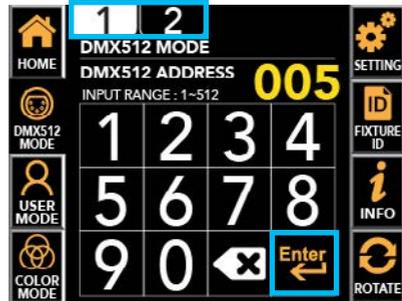


DMX512 MODE SCREEN

INFO

Displays each channel information and value.

※ To return to the previous screen, press the 'INFO' button again.

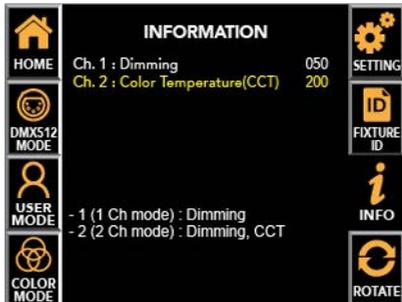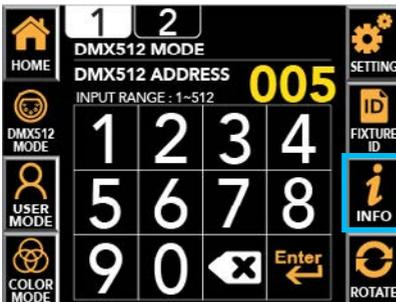

Information

- 1 (1 Ch Mode) : Dimming    - 2 (2 Ch Mode) : Dimming, CCT

\* Support channels and features vary by product.

## User Mode Setup & Intensity / CCT Adjust

\* If the equipment does not support COLOR MODE, the Tint function does not work.

**USER MODE** : It is used when the user directly manipulates the equipment.

HOME → USER MODE → Move to user-operable screen to change Intensity/CCT.


OR

'Current Intensity'  
'Current CCT' → Activate control bar and adjust value directly according to selected function.

※ In DMX mode, even if you press the current value on the main screen, the bottom bar is not active.


USER MODE screen ▶ Touch the function you want to change ▶ **Active in Orange** ▶ Adjust the value with touch or drag.

Drag the activated bar close to the desired value, and then touch  $\uparrow$ ,  $\downarrow$  to set the exact value.

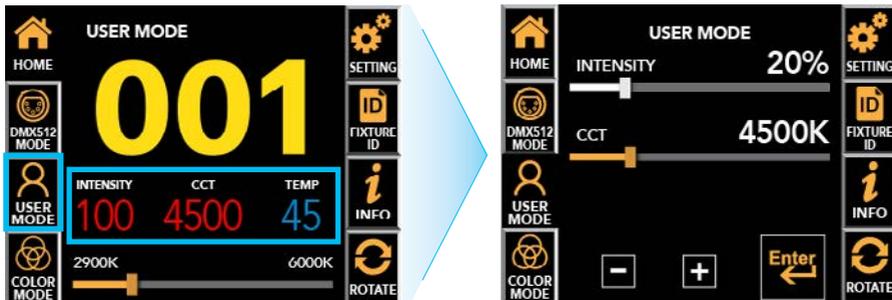

USER MODE SCREEN → INFO → Displays description of each function.

※ To return to the previous screen, press the 'INFO' button again.

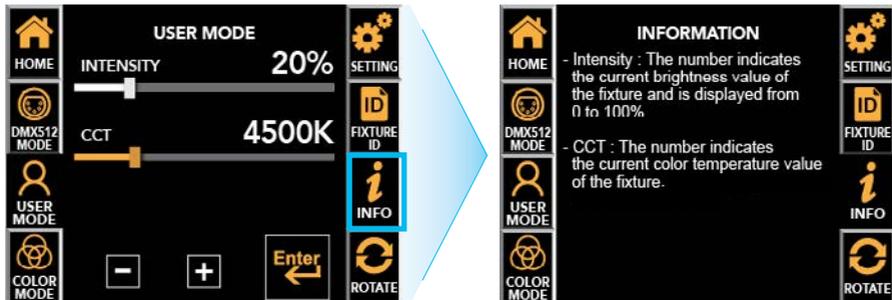

### Information

- Intensity : The number indicates the current brightness value of the fixture and is displayed from 0 to 100%.

- CCT : The number indicates the current color temperature value of the fixture and is displayed from 2,900~6,000Kelvin.

## Extra Function

### - Sleep Mode / Master / RDM / Dimming Speed

HOME

SETTING

Move to additional settings other than the main icon.

SETTING screen ▶ Touch ON/OFF the function you want to change among SLEEP MODE, MASTER, and RDM MODE ▶ **Active in Orange** ▶ Set ON/OFF

- DIMMING SPEED SETUP can be activated by touching, and press **+**, **-** to adjust the value.




SETTING SCREEN

INFO

Displays description of each function.

※ Press the INFO button again to return to the setting screen.

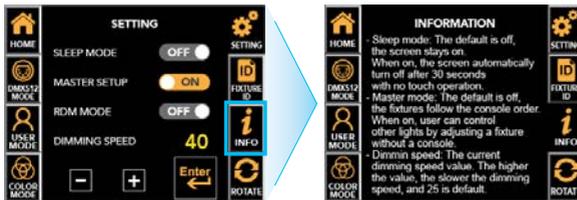

#### Information

- **Sleep mode setup (Default=Off)** : The function to automatically turn off the screen when there is no operation for 30 seconds. If OFF, it is always on the screen while power is on.
- **Master setup (Default=Off)** : The function to synchronize and user control all connected fixtures without a console connection. If OFF, the DMX signal will follow.
- **RDM setup (Default=On)** : The function to enable two-way wireless communication through RDM equipment. If OFF, it is not detected by RDM equipment.
- **Dimming speed setup** : The number indicates the current dimming speed value of the fixture and is displayed from 0 to 40. The higher the value, the slower the dimming speed, and '15' is default speed.

# Extra Function

## - Sleep Mode / Master / RDM / Dimming Speed

### Master Setup

- The master slave function allows to synchronize and control all connected lighting fixtures through the DMX signal without a console connection.
- If a problem occurs in the console or communication line, it is possible to control the brightness and CCT and color with only the lighting fixture.
- Main screen ► Setting ► Touch MASTER SETUP, the function turns on. (2 Touch)
- Functions available with one setting of the first lighting fixture.

[ Main Screen ] Touch!



[ Fixture ID Screen ]



ex



- Remove 'DMX in' cable.
- Set '**Master Enable**'
- Set the same channel mode.
- Operation After setting.

- Connecting 'DMX in & out' cable.
- Set '**Master Disable**'
- Set the same channel mode.
- No operation after setting.

## Fixture ID & Label Setup


HOME

FIXTURE ID

Move to fixture management number setting screen.

Move to input screen that can change the number ▶ Input the desired number 001 to 9999 and press Enter ▶ Move to the FIXTURE ID screen that displays the large size entered value ▶ Touch HOME icon to go back to the main screen.


[ Main Screen ]

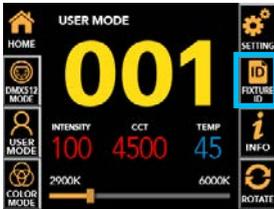

[ Fixture ID Screen ]




[ Fixture ID Input Screen ]

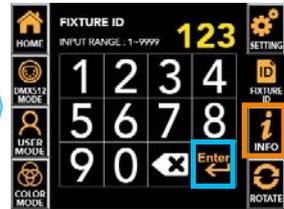Fixture ID  
Input  
Screen

INFO

Displays description of each function.

※ It is the number value 001 to 9999 for the management of the lighting fixture can be changed by manual or RDM device.

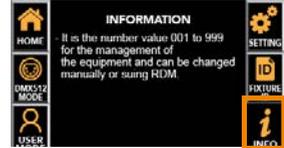

[ Device Label Setup ]



[ Change the device label through RDM ]

《 The device label is basically the model name. It can be changed through RDM communication, but it can't be changed through the Smart Touch LCD 》

Enter the device name and the management number in the 'Device Label' field. ▶ The entered contents are displayed in the upper left corner.

- The fixture ID is displayed in 3 or 4 digits from automatically recognized 4 digits in contents.
- If user do not enter any number, the fixture ID is displayed as '001'.

	ex 1	ex 2	ex 3	ex 4	ex 5
Input(Device Label in RDM)	BASE123	BASE1234	BASE12345	BASE	STUDIO13-23
Fixture Label(in Fixture)	BASE123	BASE1234	BASE12345	BASE	STUDIO13-23
ID Number(in Fixture)	123	1234	2345	001	023

## Error Information

### Temperature Sensor

Detects the temperature of the current fixture(LED source, housing) and displays it on the Smart Touch LCD screen.



If it exceeds 85°C, the actual LED output will be 0%, and


**“Temperature Error!!”**

**“Please Check Device!!”**

will be displayed.

The error messages are only displayed on the main screen and the fixture ID screen. Even if the temperature falls to the normal range, It does not disappear.

In this case, normalize the temperature of the equipment and restart it.

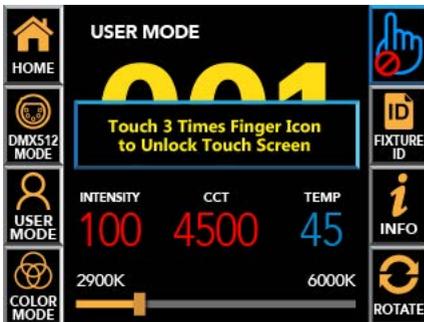

### Network Connection

When the DMX512 network connection is lost, the DMX512 address number on main screen and the fixture ID screen blinks. Reconnect after checking the connection status.

## DMX Protocols (1/2) Channel Mode

[ Channel mode of the basic model ]

Mode	Channel	DMX Value	%	Function
<b>1</b>	1	0-255	0-100	Dimmer

Mode	Channel	DMX Value	%	Function
<b>2</b>	1	0-255	0-100	Dimmer
	2	0-255	0-100	Color Temperature(CCT)

## DMX Protocols (2/2)

### 2 Channel Mode : White Color Temperature

DMX Value	Function
<b>0~255</b>	Dimmer 0~100%
<b>0~3</b>	2900K
<b>4~7</b>	2950K
<b>8~11</b>	3000K
<b>12~15</b>	3050K
<b>16~19</b>	3100K
<b>20~23</b>	3150K
<b>24~27</b>	3200K
<b>28~31</b>	3250K
<b>32~35</b>	3300K
<b>36~39</b>	3350K
<b>40~43</b>	3400K
<b>44~47</b>	3450K
<b>48~51</b>	3500K
<b>52~55</b>	3550K
<b>56~59</b>	3600K
<b>60~63</b>	3650K
<b>64~67</b>	3700K
<b>68~71</b>	3750K
<b>72~75</b>	3800K
<b>76~79</b>	3850K
<b>80~83</b>	3900K
<b>84~87</b>	3950K
<b>88~91</b>	4000K
<b>92~95</b>	4050K
<b>96~99</b>	4100K
<b>100~103</b>	4150K
<b>104~107</b>	4200K
<b>108~111</b>	4250K
<b>112~115</b>	4300K

DMX Value	Function
<b>116~119</b>	4350K
<b>120~123</b>	4400K
<b>124~127</b>	4450K
<b>128~131</b>	4500K
<b>132~135</b>	4550K
<b>136~139</b>	4600K
<b>140~143</b>	4650K
<b>144~147</b>	4700K
<b>148~151</b>	4750K
<b>152~155</b>	4800K
<b>156~159</b>	4850K
<b>160~163</b>	4900K
<b>164~167</b>	4950K
<b>168~171</b>	5000K
<b>172~175</b>	5050K
<b>176~179</b>	5100K
<b>180~183</b>	5150K
<b>184~187</b>	5200K
<b>188~191</b>	5250K
<b>192~195</b>	5300K
<b>196~199</b>	5350K
<b>200~203</b>	5400K
<b>204~207</b>	5450K
<b>208~211</b>	5500K
<b>212~215</b>	5550K
<b>216~219</b>	5600K
<b>220~223</b>	5650K
<b>224~227</b>	5700K
<b>228~231</b>	5750K
<b>232~235</b>	5800K

DMX Value	Function
<b>236~239</b>	5850K
<b>240~243</b>	5900K
<b>244~247</b>	5950K
<b>248~255</b>	6000K

## RDM Protocols (1/3)

Parameter ID	Discovery command	SET command	GET command
DISC_UNIQUE_BRANCH	YES		
DISC_MUTE	YES		
DISC_UN_MUTE	YES		
DEVICE_INFO			YES
SUPPORTED_PARAMETERS			YES
SOFTWARE_VERSION_LABEL			YES
DMX_START_ADDRESS		YES	YES
IDENTIFY_DEVICE		YES	YES
DEVICE_MODEL_DESCRIPTION			YES
MANUFACTURER_LABEL			YES
DEVICE_LABEL		YES	YES
SENSOR_DEFINITION			YES
SENSOR_VALUE			YES
DMX_PERSONALITY		YES	YES
DMX_PERSONALITY_DESCRIPTION			YES
STATUS_MESSAGES			YES

### [ Lamp Controls ]

No	Control Property	Value (Example)	Description	User Setting	Remarks
1	Identify On	N/A	Device identification action active	Enable	Identify device = Same as On
2	Identify Off	N/A	Device identification action inactive	Enable	Identify device = Same as Off
3	Cold Reset	N/A	Device reset(restart)	Enable	Same as Warm reset
4	Warm Reset	N/A	Device reset(restart)	Enable	Same as Cold reset

## RDM Protocols (2/3)

No	Device Property	Value (Example)	Description	User Setting	Remarks
1	Device Model Description	A2460	Model number of the device	Disable	
2	Manufacturer Label	ALPHA LITE	Name of the manufacturer	Disable	
3	Device Label	BASE123	Fixture name and management number	Enable	ex) Input : BASE123 · Name : BASE123 · Management # : 123 - Automatic recognition of up to 4 digits. If there is no number, the default is '001'.
4	Software Version Label	M0E-v1.10-v5.27-180928	Software version	Disable	
5	DMX Personality	1 Ch. Mode	DMX channel mode and color temperature setting	Enable	See [Table 1]
6	DMX Start Address	1	DMX address	Enable	1-512 Range
7	Device Hours	N/A		N/A	Display only, no actual response.
8	Lamp Hours	N/A		N/A	Display only, no actual response.
9	Lamp State	N/A		N/A	Display only, no actual response.
10	Lamp On Mode	N/A		N/A	Display only, no actual response.
11	Display Invert	On	LCD screen display direction	Enable	· Off : 0° · On : 180° · Auto : Current opposite direction
12	Identify Device	Off	Selected fixture blinking indication	Enable	· Off : Deactivates blinking · On : Activates blinking
13	Speed Set	15	Dimming delay Setting	Enable	0-40 range The larger the value, the slower the dimming.
14	Display Mode	0	Normal screen / Fixture ID screen transitions	Enable	· 0 : Normal screen · 1 : Fixture ID screen
15	Max. Temp	75	Fixture maximum temperature display	Enable	Use for initialization if necessary

## RDM Protocols (3/3)

### [ Sensor ]

No	Device Sensors	Value (Example)	Description	User Setting	Remarks
1	Sensor Temp	64°C	Current fixture temperature	Disable	

### [ Error Message ]

No	Condition	Level	Description	Display
1	Sensor Over Temp	Warning	Fixture temperature 46 ~ 69°C	Orange message
2	Sensor Over Temp	Error	Fixture temperature over 70°C	Red message

### [ Table 1 ]

Model	Value	Description
<b>2 Ch. Model Device</b> (Variable Color Temperature)	1 Ch. Mode	1 Ch. Mode
	2 Ch. Mode	2 Ch. Mode
	1 Ch. 2900K	1 Ch. Mode + 2900K Color Temperature
	1 Ch. 3000K	1 Ch. Mode + 3000K Color Temperature
	1 Ch. 3100K	1 Ch. Mode + 3100K Color Temperature
	1 Ch. 3200K	1 Ch. Mode + 3200K Color Temperature
	1 Ch. 4400K	1 Ch. Mode + 4400K Color Temperature
	1 Ch. 4500K	1 Ch. Mode + 4500K Color Temperature
	1 Ch. 5500K	1 Ch. Mode + 5500K Color Temperature
	1 Ch. 5600K	1 Ch. Mode + 5600K Color Temperature
	1 Ch. 5700K	1 Ch. Mode + 5700K Color Temperature
	1 Ch. 6000K	1 Ch. Mode + 6000K Color Temperature



## ALPHA LITE USER MANUAL BOOK

—

<Tel> 82-2-6317-0464

<Fax> 82-2-2039-0464

<E-mail> [hello@alpha-lite.net](mailto:hello@alpha-lite.net)

<Web> [www.alpha-lite.net](http://www.alpha-lite.net)